




INSTALLATION INSTRUCTIONS

MBC-071 & MBC-081 Mounting Brackets

Diagram

MBC-071 mounting bracket shown

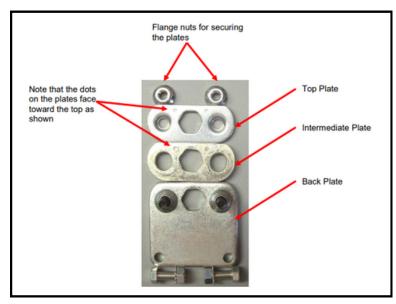

Note - FE rollers require one (1) bracket on cable end only.
FP / FS / FH rollers require two (2) brackets. One on cable end; one on spring-loaded end.

Slide back plate over power cable and place on shaft.



Place intermediate plate onto back plate over the studs, ensuring the depressions fit over the cones on the studs and the dots face toward the top.



Install flange nuts and finger tighten.



Fasten back plate to frame and tighten nuts to 2.6 lb-ft (3.5 Nm)



Place top plate over intermediate plate with dots facing toward the top. Make sure the shaft protrudes all plates.



Alternately tighten nuts using a torque wrench set between 4.4 – 7.4 lb-ft (6 Nm – 10 Nm).



